



UK02A Instructions


1. Unlock Lid

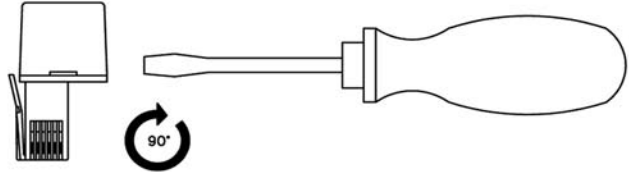


2. Remove Lid

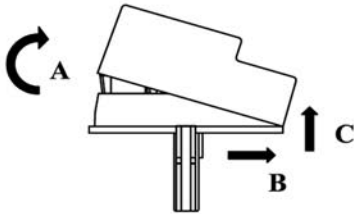


3. Lift Wire Holders

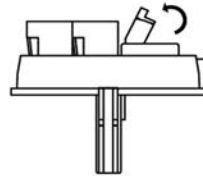


4. Strip outer jacket
from wires to slide into
tubes & trim to 15mm

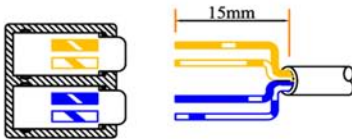

5. Insert wires into
appropriate tubes
(same colours)

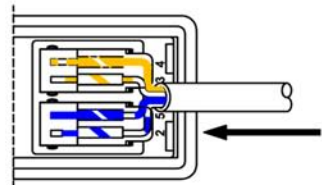

6. Close Wire Holders
& replace lid

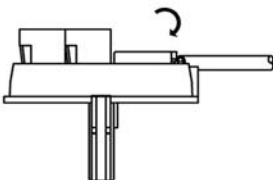

Note: Jacket meets end
of Wire Holders